


#### **ELECTRONIC**

# THERMOSTAT series TE13

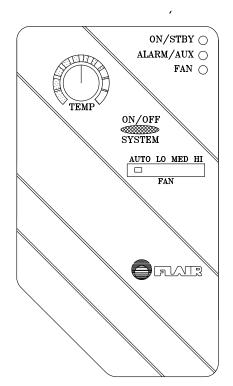

For control of fan coils and Packaged Terminal Air Conditioners (PTACs). Available in heating only or cooling only.

### **BENEFITS & SPECIAL FEATURES**

- 4 minute time delay for compressor protection (may be bypassed).
- Remote temperature sensor (optional).
- Return air temperature sensor (optional).
- Manual on/off override.
- Electronic temperature limiting and locking.
- Low and high limit temperature alarms can activate a dry contact to switch an external control.
- Three speed automatic fan selection control with manual override.
- System status indicators.
- Models to accompdate 24/120/208/230/277 VAC.

## **SPECIFICATIONS**

Operating Voltage: 24/120/208/230/277 vac (-15%, +10 %, 50-60 Hz)

Switching Current at rated voltage:

Cooling: minimum 10 Amps
Heating: minimum 10 Amps
Fan: minimum 10 Amps
Alarm: minimum 1 Amp
Auxiliary: minimum 1 Amp

Temperature Range: 50°F - 90°F (10°C - 32°C)
Temperature Differential:

Heating: approximately  $\pm 0.8^{\circ}$ F ( $.4^{\circ}$ C) Cooling: approximately  $\pm 0.8^{\circ}$ F ( $.4^{\circ}$ C) Fan (in auto mode):

Low: < 2° F (1.1° C)
Med: 2 - 4° F (1.1°-2.2° C)
High: > 4° F (2.2° C)

 $5^{43}_{64} \times 3^{1}_{4} \times 1^{3}_{16}$  Inches (144.1 x 82.6 x 30.2 mm)

Sensor System: Negative Temperature Coefficient (NTC)
Standard: internal

Optional: remote temperature
Optional: return air temperature
Compressor Protection: switched 4 minute time delay
Switches:

Push-button: SYSTEM: ON/OFF
Slide: FAN: AUTO/LOW/MED/HIGH
Rotating: set TEMPerature
Indicator LED's: ON (Steady Green) / STBY (Flashing Green)
ALARM (Flashing Red) / AUX (Steady Red)

Fan: Low:: (Slow Flashing Red) / AUX (Steady Red)


Fan: Low:: (Slow Flashing Yellow)

Med: (Flashing Yellow)

High: (Fast Flashing Yellow)


Security: Electronic temperature limiting and locking

# **DIMENSIONS**

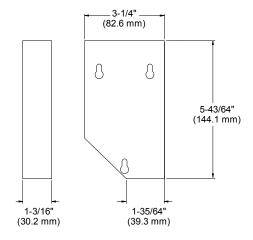

Dimensions:

# MODEL NUMBERS AND DESCRIPTIONS FOR VARIOUS APPLICATIONS

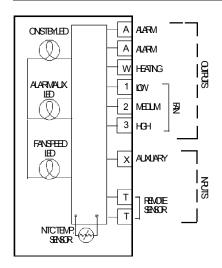


Model Number: TE131020; 24 VAC TE131030; 100 VAC

TE131040; 120 VAC TE131050: 208 VAC TE131070; 230 VAC TE131090; 277 VAC

Description: 1 stage heat

Weight: .4 lbs. (880 g)

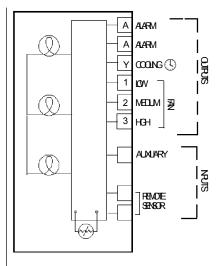

Model Number: TE130120; 24 VAC

TE130130; 100 VAC TE130140; 120 VAC 208 VAC TE130150: TE130170; 230 VAC TE130190; 277 VAC

Description: 1 stage cool

Weight: .4 lbs. (880 g)

### **ACCESSORIES**

Remote Temperature Sensor TX101001 Return Air Temperature Sensor TX101011

Backplates may be used to cover large holes in walls or mount to utility boxes:

horizontal TX201001 TX202001 vertical TX203001 square

Auto changeover between heating and cooling can be accomplished when used with Heating/Cooling Changeover Switch:

For  $\frac{1}{2}$  to  $\frac{1}{4}$  pipe For 1<sup>1</sup>/<sub>4</sub>" to 3" pipe AC000101

Transformers:

TR140100 40 VA 20 VA TR120100

Relay Transformers:

20 VA (2) SPST 120 VAC relay TR440200 20 VA (1) SPST 120 VAC relay TR440300

### **APPLICATIONS**

- Zone heating or cooling.
- Residential. (Single or multi-family, Apartments, Co-ops, Condominiums)
- Commercial. (Stores, Restaurants, Offices)
- Industrial.
- Institutional. (Hospitals, Hotels, Motels)

### **REFERENCES**

For More Information On: See:

TF13 Remote Model

Wiring, jumper, potentiometer settings

Zone Actuators

and applications This section

Other thermostats Star Actuator section

Zone Valves Control Panels section

Wiring Panels Price section Warranty & pricing Pricing & Terms

section

Instruction sheet

Star Valve section

Indicates this output is protected by a switched 4- minute time delay.





Flair pursues a policy of constant improvement. For this reason, all specifications are subject to change without notice.

