


ELECTRONIC MODULATING

THERMOSTAT series TE81

For modulating control of central (main) or zoned heating and cooling systems.

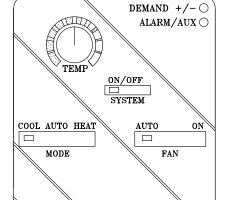

GFAIR

BENEFITS & SPECIAL FEATURES

- Adjustable dead band prevents overlapping between heating and cooling modes.
- Floating point control for closer tolerance.
- Manual on/off override.
- Electronic temperature limiting and locking.
- Low and high limit temperature alarms can activate a dry contact to switch an external control.
- Automatic heating/cooling changeover.
- Continuous (on) or intermittent (auto) fan control.
- Direct or reverse acting.
- System status indicators.
- No batteries required.
- Remote temperature sensor (optional).
- Return air temperature sensor (optional).
- Warmer/cooler scale standard.
- Fahrenheit and Celsius scales included.
- No sub-base required.
- Attractive modern design.

SPECIFICATIONS

 Operating Voltage:
 24 vac (-15%, +10%, 50-60 Hz)

 Temperature Range:
 50° F - 90° F (10° C - 32° C)

 Proportional Band:
 2 - 10° F (1.1° - 5.5° C)

 Bandwidth:
 0-2° F (0-1.1° C)

 Dead Band:
 1° - 4° F (.6° - 2.2° C)

 Sensor System:
 Negative Temperature Coefficient (NTC)

System: Negative Temperature Coefficient (NTC)
Standard: internal
Optional: remote temperature
Optional: return air temperature

 Switches :
 Slide:
 SYSTEM: ON/OFF

 Slide:
 MODE: COOL/AUTO/HEAT

 Slide:
 FAN: AUTO/ON


Rotating: set TEMPerature
Switched Outputs: Triac/relay
Indicator LED's: ON (Green)
ALARM (Flashing Red) / AUX (Steady Red)

Modulating circuit:


DEMAND + (Steady Blue)
Set point Off
DEMAND - (Flashing Blue)

Security: Electronic temperature limiting and locking Dimensions: $5^{43}_{64} \times 3^{1}_{4} \times 1^{3}_{16}$ Inches (144.1 x 82.6 x 30.2 mm)

DIMENSIONS

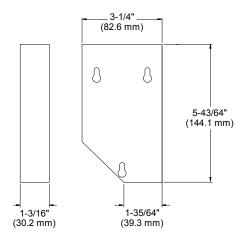

MODEL NUMBERS AND DESCRIPTIONS FOR VARIOUS APPLICATIONS

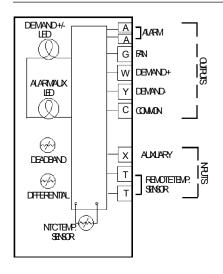

Model Number: TE811120

Description: 1 stage heat, 1 stage cool

Switching Current at 24 VAC:

 Cooling:
 1 Amp

 Heating:
 1 Amp

 Fan:
 1 Amp

 Alarm:
 1 Amp

 Auxiliary:
 1 Amp

 Weight:
 .4 lbs. (880 g)

ACCESSORIES

Remote Temperature Sensor TX101001
Return Air Temperature Sensor TX101011
Backplates may be used to cover large holes in

walls or mount to utility boxes:

horizontal TX201001 vertical TX202001 square TX203001

Transformers:

40 VA TR140100 20 VA TR120100

Relay Transformers:

20 VA (2) SPST 120 VAC relay TR440200 20 VA (1) SPST 120 VAC relay TR440300

APPLICATIONS

- Central (main) heating or cooling.
- Zone heating or cooling.
- Residential (Single or multi-family, Apartments, Condominiums, Co-ops).
- Commercial (Stores, Restaurants, Offices).
- Industrial.
- Institutional (Hospitals, Hotels, Motels).

REFERENCES

For More Information On: See:

Remote Model TF81 data sheet

Wiring, jumper, potentiometer settings

and applications Instruction sheet

Other thermostats This section

Zone Actuators Star Actuator section

Zone Valves Star Valve section

Wiring Panels Control Panels section

Warranty & pricing Pricing & Terms

section



Flair pursues a policy of constant improvement. For this reason, all specifications are subject to change without notice