

ON/OFF

SYSTEM


ON/STBY ALARM/AUXO

ELECTRONIC

HERMOSTAT series TF10

For central (main) or zoned control of heating or cooling systems not requiring fan control.

BENEFITS & SPECIAL FEATURES

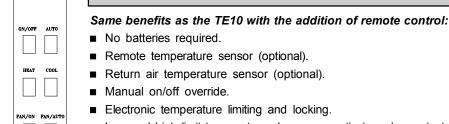



No batteries required. Remote temperature sensor (optional). Return air temperature sensor (optional).

Manual on/off override. Electronic temperature limiting and locking.

Low and high limit temperature alarms can activate a dry contact to switch an external control.

System status indicators.

Warmer/cooler scale standard.

Fahrenheit and Celsius scales included.

No sub-base required.

Attractive modern design.


Infra-red remote control internal receiver (standard).


Infra-red remote control transmitter (optional).

Infra-red remote control external receiver (optional).

DIMENSIONS

PFAIR

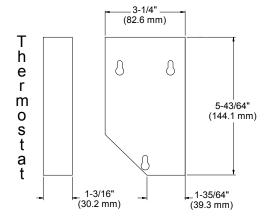

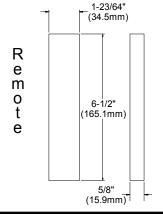

SPECIFICATIONS

Operating Voltage: 24 vac (-15%, +10%, 50-60 Hz) Temperature Range: 50°F - 90°F (10°C - 32°C)

Temperature Differential: Heating: approximately ±0.8°F (.4°C)

Cooling: approximately ±0.8°F (.4°C) Sensor System: Negative Temperature Coefficient (NTC) internal Standard:

Optional: remote temperature Optional: return air temperature

Slide: SYSTEM: ON/OFF Rotating: set TEMPerature

Indicator LED's: ON (Steady Green) STBY (Flashing Green) ALARM (Flashing Red) AUX (Steady Red) Security: Electronic temperature limiting and locking. 5⁴³/₆₄ x 3¹/₄ x 1³/₁₆ Inches (144.1 x 82.6 x 30.2 mm) Dimensions: Thermostat:


Remote: $6^{1/2}$ x $1^{23/64}$ x $^{5/8}$ Inches (165.1 x 34.5 x 15.9 mm) Remote Control Transmitter (optional) 7-button infra-red

Battery: (2) AAA Range: 36' (10 meters)

Remote Control Receiver (optional): infra-red 36' (10 meters) Range:

Switches:

MODEL NUMBERS AND DESCRIPTIONS FOR VARIOUS APPLICATIONS

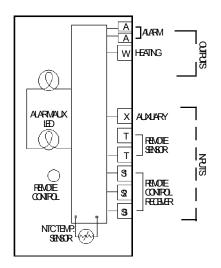


Model Number: TF101020

Description: 1 stage heat (2-wire)

Switching Current at 24 VAC:

Heating: 1 Amp
Alarm: 1 Amp
Auxiliary: 1 Amp
Weight: .4 lbs. (880 g)

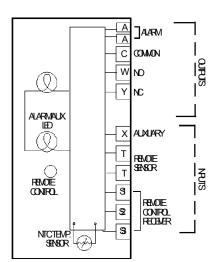

Model Number: TF101021

Description: 1 stage heat, or cool (3-wire)

Switching Current at 24 VAC:

N/O: 1 Amp
N/C: 1 Amp
Alarm: 1 Amp
Auxiliary: 1 Amp
Weight: .4 lbs. (880 g)

ACCESSORIES

Remote Temperature Sensor TX101001
Return Air Temperature Sensor TX101011

Backplates may be used to cover large holes in walls or mount to utility boxes:

horizontal TX201001 vertical TX202001 square TX203001

Auto changeover between heating and cooling can be accomplished when used with Heating/Cooling Changeover Switch.

For 1/2" to 11/4" pipe AC000100 For 11/4" to 3" pipe AC000101

Remote Control Transmitter TX502001 (Compatible with internal and external remote control receivers.)

Remote Control Receiver (external) TX503001
(Up to 5 receivers may be daisy chained to thermostat and placed at remote locations—relays signal from remote control transmitter to thermostat.)

Transformers:

40 VA TR140100 20 VA TR120100

Relay Transformers:

20 VA (2) SPST 120 VAC relay TR440200 20 VA (1) SPST 120 VAC relay TR440300

APPLICATIONS

- Central (main) heating or cooling.
- Zone heating or cooling.
- Residential. (Single or multi-family, Apartments, Co-ops, Condominiums)
- Commercial. (Stores, Restaurants, Offices)
- Industrial.
- Institutional. (Hospitals, Hotels, Motels)

REFERENCES

For More Information On: See:

Non-Remote Model TE10 data sheet

Wiring, jumper,

potentiometer settings

and applications Instruction sheet

Other thermostats This section

Zone Actuators Star Actuator section

Zone Valves Star Valve section

Wiring Panels Control Panels section

Warranty & pricing Pricing & terms

section



Flair pursues a policy of constant improvement. For this reason, all specifications are subject to change without notice.